


IziFix® Post

The **small notch** is to be positioned against the post



The **large notch** is to be positioned on the 2nd vertical wire of the panel

Please ensure the installation wedge is installed correctly as shown below:

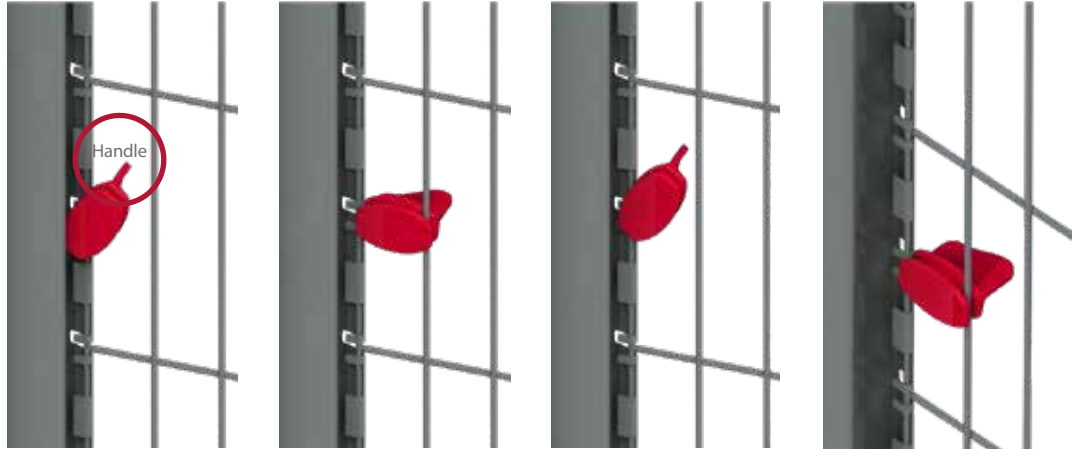

Insert the wedge between the 2 lingulets of the post



Turn the wedge in a clockwise direction



Block the wedge against the vertical wire



This is now ready for the new panel/post installation


Poteaux IziFix®

Petite encoche : à placer côté poteau entre les 2 griffes



Grande encoche : à placer sur 2^{ème} fil vertical du panneau

Respecter le sens de pose de la cale :

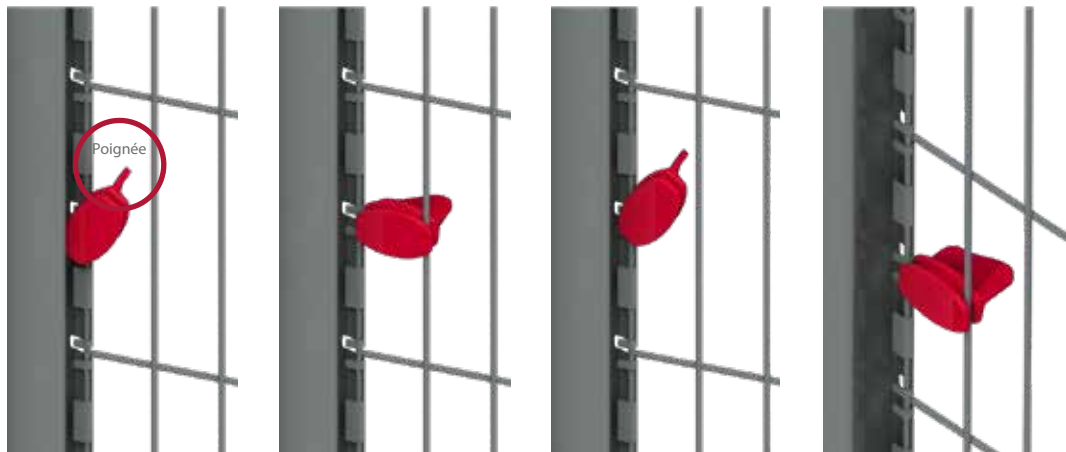

Insérer la cale sous la poignée du poteau



Tourner délicatement la cale dans le sens des aiguilles d'une montre



Bloquer la cale sur le fil vertical du panneau. La cale se situe juste au dessus du fil horizontal



Vous êtes maintenant prêt pour la pose du prochain panneau/poteau